

GR96 Recommended Maintenance Schedule

ZERO Turf Machines

	Component	Task	Spec	Daily	Weekly	Bi-Weekly	Monthly
Chassis	Front Wheel Casters	Lubrication					✓
	Front Tires	Check air pressure	22 psi		✓		
	Rear Tires	Check air pressure	18 psi		✓		
	Rear Lug Nuts	Check torque	75 ft-lbs				✓
	Frame Fasteners	Check and tighten					✓
Spreader	Hopper Cables	Lubrication	Silicone spray		✓		
	Hopper Bottom Bushing	Check for presence and damage	Replace if needed			✓	
	Hopper Spinner	Check for damage	Replace if needed		✓		
	Clean bottom of hopper	Clean with wire brush to remove buildup				✓	
Sprayer	Leaks	Inspect for leaks	Replace as needed	✓			
	Spray Nozzle Screen	Remove, clean, check for damage (both screen and rubber gasket)	Replace if needed		✓		
	In-Line Strainer	Remove screen, clean, check for damage (both screen and rubber gasket)	Replace if needed		✓		
	Handheld Spray Gun	Inspect for leaks, check tip				✓	